


SmartElex

Wireless Remote Control Motor Driver

How to bind:-


ON-Remote (Transmitter)side

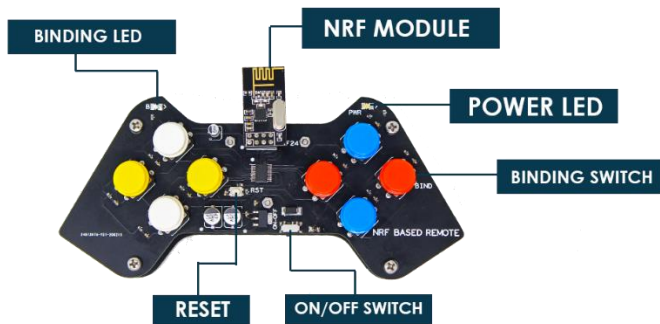

- First, we have to connect the NRF Module. Otherwise status LED BLINK Continuously.
- Press Binding Switch and hold.
- Then press the reset button for 5sec and release.

- Now release Bind Switch.
- Binding Status LED(B) will start blinking on remote. It means remote is in binding mode and searching for the receiver.

ON-receiver side

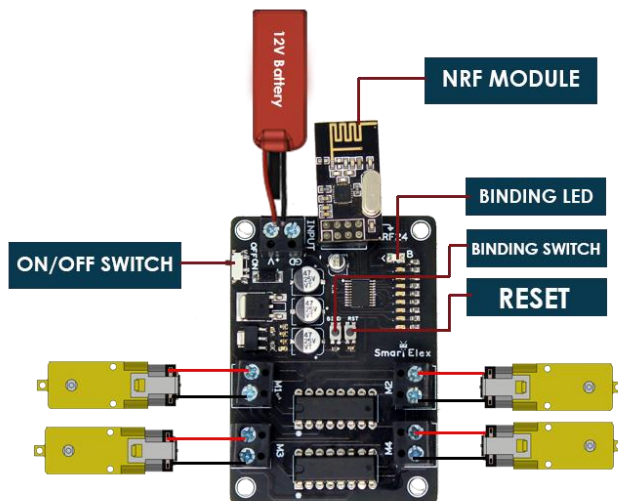

- First, we have to connect the NRF Module. Otherwise status LED BLINK Continuously.
- Press Binding switch and hold.
- Then press the reset button for 5sec and release.
- Now release Bind switch.

- Bind Status LED(B) will start blinking on receiver side. It means remote in binding mode and searching for the transmitter.
- After Few seconds receiver side Bind Status (B) led blink fast (frequency of led blinking change) which means remote and receiver bind. Now reset both remote and receiver by pressing the reset button.
- Now Ready To Drive.